


Plumbdinger...

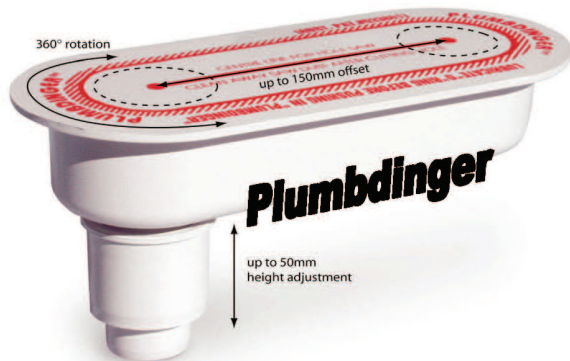

Available to suit 40mm and 50mm bath installations as well as 80mm to suit showers.

Installation Instructions:

1. The minimum installation height between floor and bottom of bath waste outlet is 85mm, if bath has to be installed higher than that, cut 40mm PVC pipe to a length so that the distance between the end of the pipe and bottom of bath waste outlet is between 85mm & 125mm.
2. Remove any burr from the cut PVC pipe and clean, solvent weld "O" ring bush into waste pipe or solvent weld insert with "O" ring attached onto Plumbdinger. Lubricate "O" ring and insert into 40mm PVC pipe or bush, pushing in firmly and as far as possible. (Note: Bush supplied with Plumbdinger fits 40mm or 50mm waste pipe).
3. Place Bathtub in position and line up "centre line for hole saw" on Plumbdinger with centre of waste hole on bath.

4. With a 44mm diameter "Hole Saw" cut a hole on the "centre line" of the Plumbdinger through the centre of the waste outlet hole in the bath.

5. Clean away any saw dust and insert the "retaining ring and rubber doughnut" between bath and top of Plumbdinger. Next, place a bead of silicone into the recess in the bath waste outlet hole (top side).

6. Attach "wing nut" to wire hook supplied and lower into the cut hole, centralise by using locating lugs on each leg of the wing nut and pull up with hook. Slide brass waste over the wire hook, insert screw and tighten lightly. Line up brass waste with wing nut and tighten firmly with screw driver to compress rubber doughnut. Remove wire hook.

